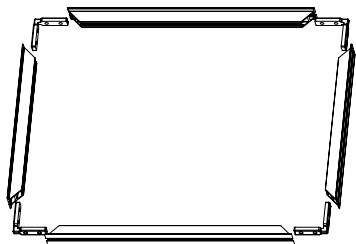


1. GRAPHIC + ANTIREFLECTION PROTECTOR **PLACEMENT****CONTENT**

Open and check the content of the box and take out all the pieces carefully.


The hangers, corner connectors and the Allen keys will be included.

Once the profiles have been organised, place a corner connector and then join the aluminium profiles together.

To finish, screw the corners and place the foam graphic inside the frame using the adhesive strips.



## PREPARATION OF THE FOAM GRAPH

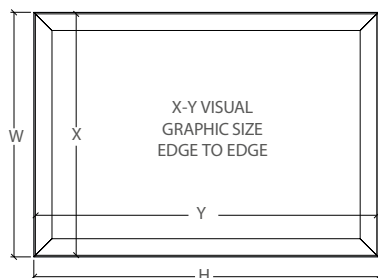

With this frame (edge to edge) you don't need to prepare your design with surplus, but ideally pay attention that the Logos and the information of your design are **not located near of the perimeter**. After foam printing, attach it to the adhesive strips located inside the frame.

For those cases in which the graphic is **supplied by the client**, we recommend making use of the materials listed in the following **QR code** (scan for downloading Excel file). Please contact us or visit [www.cashdisplay.com](http://www.cashdisplay.com) for more information.

2. SET UP FRAME **STRUCTURE**